




FALCON

Ladder & Scaffold Mfg.

TOUGH

1671A Cary Road, Kelowna, B.C. V1X 2C1
Phone: (250) 861-9556 Fax: (250) 861-9553

TRIGGER – REPLACEMENT PARTS

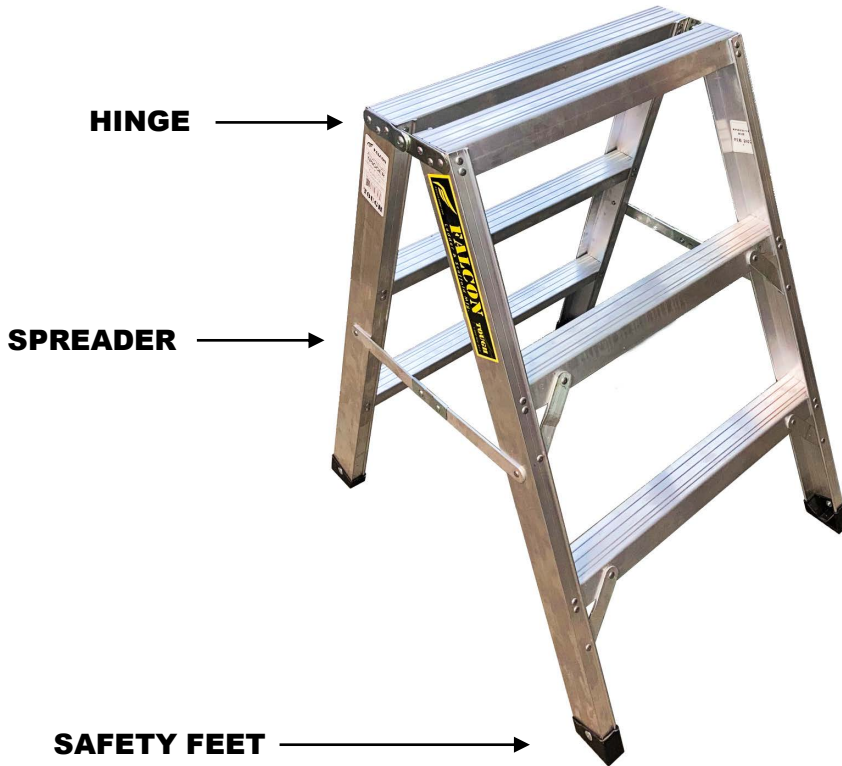

Tools Required:

- 1.- 1/4" Drill Bit
- 2.- 7/16" Wrench
- 3.- #2 Robertson Screwdriver

Hardware:

- 1.- 1/4" Nylock Nut
- 2.- 1/8" x 7/8" Machine Screw
- 3.- 3/16" Flat Washer - Plated

HINGE

Instructions:

- 1.- Drill-out rivets with a 1/4" drill bit
- 2.- Replace with new bolts and locking nuts.

SPREADER

Instructions:

- 1.- Drill-out rivets with a 1/4" drill bit
- 2.- Replace with washers between spreaders and siderails.
- 3.- Insert new bolts and locking nuts.

SAFETY FEET

Instructions:

- 1.- Drill-out rivets with a 1/4" drill bit
- 2.- Replace with new bolts and locking nuts.